
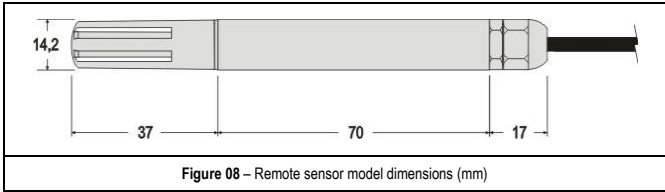


INSTALLATION

The RHT-P10 electronic housing is designed for wall mounting, while its remote sensor probe is intended for inserting and screwing in a flange.

Remove the housing front panel to access the two fixing holes, shown in **Figure 07**.

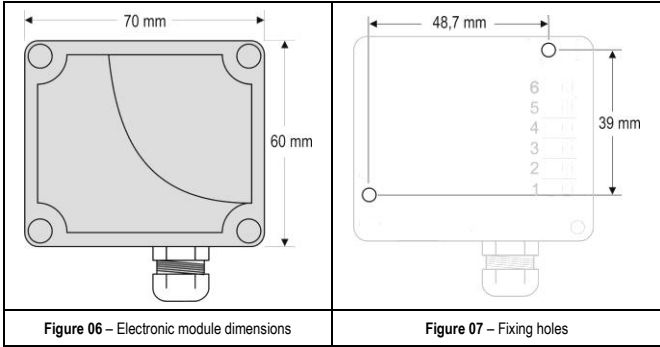

ELECTRICAL CONNECTIONS

The transmitter can be ordered as **4-20 mA** current output or **0 to 10 Vdc** voltage output. The output signal is defined on purchase and cannot be later changed.

Variables can be monitored together or separately. Combinations of mobile jumpers **J4** and **J5** within the transmitter case define how variables will be used. The jumpers also define the transmitter terminals with available output signals.

Jumper J5	Jumper J4	OUT1	OUT2
Position A	Position A	Temperature	Humidity
Position A	Position B	Temperature	Off
Position B	Position A	Humidity	Off
Position B	Position B	Humidity	Temperature

Table 01 – Configuration of OUT1 and OUT2 outputs



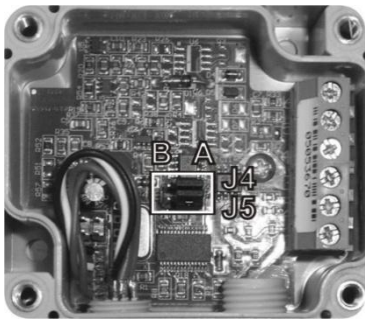


Figure 10 – J4 and J5 position within the transmitter

Figures 11 and 12 show the required electrical connections.

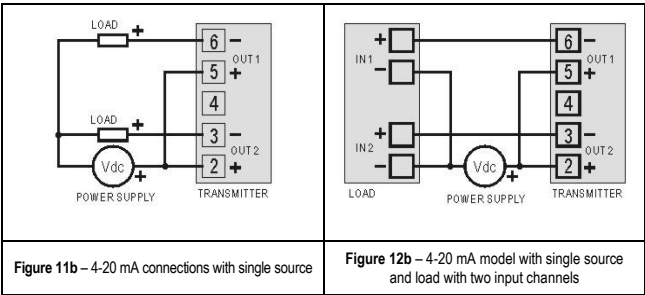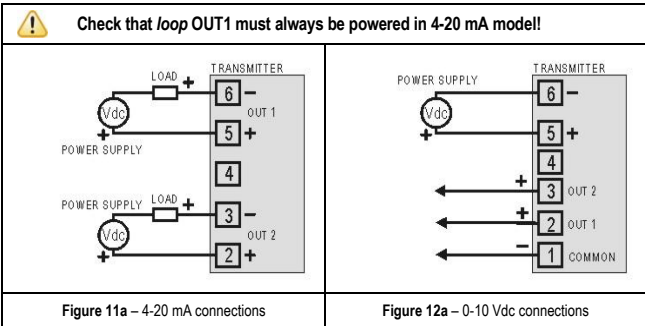

**LOAD** represents the output signal measurement equipment (controller, register, etc.).

The connection wires go inside the transmitter trough to the cable gland mounted in the transmitter case.

INSTALLATION RECOMMENDATIONS

- Conductors of small electrical signals must be distant from activation or high-tension/current conductors, preferably passing through grounded conduits.
- A specific electrical power supply network should be provided for instruments use only.
- In controlling and monitoring applications, possible consequences of any system failure must be considered in advance.
- RC filters (47 R and 100 nF, serial) in inductor charges (contactors, solenoids, etc.) are recommended.

HUMIDITY AND TEMPERATURE TRANSMITTER

RHT-XS

OPERATING MANUAL



Man 5000282

ATTENTION

The calibration of the humidity sensor may change in case it is exposed to contaminating vapors or to high humidity and temperature conditions for extended periods. In order to speed up the calibration restoration, proceed as described below:

- Remove the sensor from the capsule.
- Wash it with water in case there are solid particles on it.
- Place it within a 80 °C (+-10 °C) oven for 24 hours.
- Place it for 48 hours in a place with a temperature between 20 and 30 °C and humidity over 75 % RH.
- Place the sensor back in the capsule.

WARRANTY

Warranty conditions are available on our web site [www.novusautomation.com](http://www.novusautomation.com).

SPECIFICATIONS

**Humidity:**  
**Total accuracy:** Refer to **Figure 01**;  
**Measuring range:** Configurable between 0 and 100 % RH or –100 and 103 °C for dew point;  
**Response time (1/ e (63 %)):** 8 seconds @ 25 °C (is slow moving air 1 m/s);

**Temperature measurement:**  
**Total accuracy:** Refer to **Figure 01**;  
**Measuring range:** Configurable between -40 and 120 °C (\*);  
**Response time (1/ e (63 %)):** up to 30 seconds (is slow moving air 1 m/s);

**General specifications:**  
**Outputs:** 4-20 mA model: 4-20 mA current, 2-wire (loop power supply)  
0-10 V model: 0-10 Vdc / 2 mA max.  
**Power supply:** 4-20 mA model: 12 Vdc to 30 Vdc  
0-10 V model: 18 to 30 Vdc / 15 mA max.  
**Output Load (RL):** 4-20 mA model:  $RL (Ohms\ max.) = (Vdc - 12) / 0.02$   
Where: Vdc= Voltage supply in Volts.  
0-10 Vdc model: 2 mA max.

**OUT1 output resolution:** 0.006 mA (4-20 mA) / 0.003 V (0-10 V);  
**OUT2 output resolution:** 0.022 mA (4-20 mA) / 0.015 V (0-10 V);  
**Isolation between loops:** The 4-20 mA outputs are isolated from each other.  
The 0-10 V are **not** isolated from each other.

**Provides protection against power supply polarity inversion;**  
**Operating limits:** Eletronic circuit: -10 to +65 °C, 0 to 95 % RH  
Sensor: -10 to +65 °C, 0 to 95 % RH (\*)

**Protection standard:** Eletronic circuit case: IP65; Sensors: IP40  
**Cable entrance:** Compress fitting PG7  
**Cable length:** 3 m (other lengths available upon request)

(\*) Although the transmitter can be configured with a measuring range from -40 up to +120 °C, the sensor module must not be submitted to temperatures out of the -10 to +65 °C range.

IMPORTANT NOTE

The transmitter sensor may be damaged or lose calibration if it is exposed to aggressive atmospheres with high concentrations as Chloride Acid, Nitride Acid, Sulphuric Acid and Ammonia. Acetone, Ethanol and Propylene Glycol may cause reversible measurement errors.

Measures Accuracy and Sensor Operating Limits:

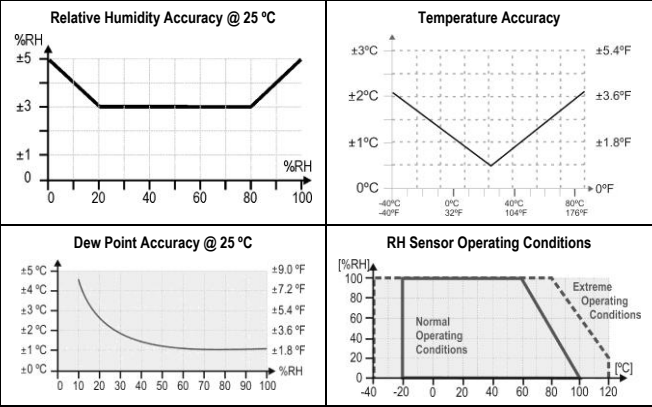


Figure 01 – RH and temperature accuracies

CONFIGURATION

If the default configuration or the ordered configuration satisfies the application, then no further configuration is necessary and the transmitter is ready to be used. If a new setting is desired, this can be accomplished by the **TxConfig** and sent to the transmitter through the **TxConfig interface**.

The TxConfig Interface and Software compose the **Transmitter Configuration Kit**, with can be purchased separately from the manufacturer or one of its distributors. The latest release of this software can be downloaded from our web site. To install, run the **Tx\_setup.exe** and follow the instructions.

The TxConfig interface connects the transmitter to the PC, as shown in **Figures 02 and 03**. There are two types of interface: TxConfig-RS232 and TxConfig-USB.

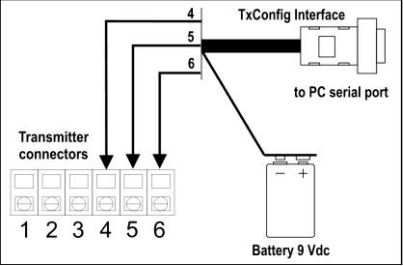


Figure 02 – TxConfig Interface connections model RS232.

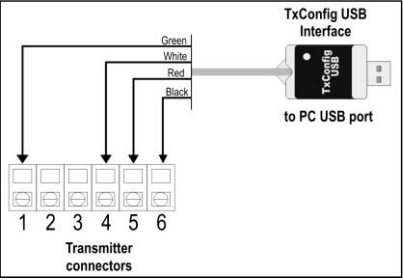


Figure 03 – TxConfig Interface USB connections

Once the connection is accomplished, the software shows the configuration options of the transmitter model attached. Access the **Help** for usage instructions.

Figure 04 shows the TxConfig software main screen.

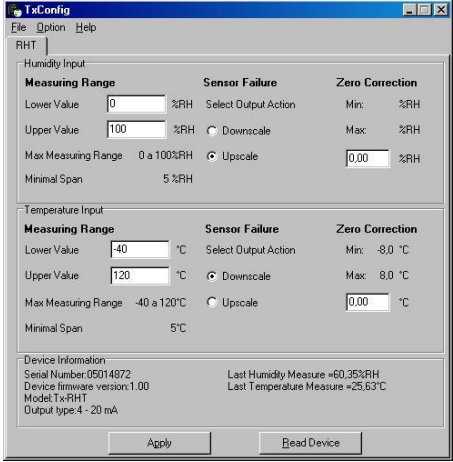


Figure 04 – TxConfig software main window

The fields in the screen mean:

- Measuring Range:** Defines the output scale for the input sensor. Program here the measurement **Lower Range Value** and the **Upper Range Value**.  
The values configured in these fields cannot be beyond the **sensor measuring range**. The **minimal span** value has to be observed as well.  
When the lower limit is defined with a value higher than the Higher Limit the output current operates from 20 to 4 mA.
- Sensor Failure:** establishes the transmitter output behavior (upscale or down-scale) in the presence of a sensor fail. When Minimum is selected, the output current is < 4 mA (down-scale), typically used for refrigeration. When Maximum is selected, the output current is > mA (up-scale), typically used in heating systems.
- Zero Correction:** Allows for small sensor corrections.
- Device Information:** Transmitter identification data. These information must be informed when the user contact us.
- Read Device:** Brings to the screen the current transmitter parameters configuration.
- Apply:** Sends a new configuration to the transmitter.

**Note:** The factory default configuration is (unless otherwise specified or ordered):  
• RHT sensor, temperature span 0 to 100 °C and humidity span 0 to 100 % RH;  
• 0 °C of zero correction.  
• Upscale when sensor fails.

It is important to notice that the transmitter accuracy is always based on the total span of the used sensor, even if a narrower range is configured. Example:

Humidity sensor has a total span of 0 to 100 % and accuracy of 3 % at 25 °C, as showed in **Figure 01**. This 3 % RH error is the same no matter if the total span is configured (0 to 100 %) or a narrower span (like 20 to 80 %).

Este erro é mesmo em uma faixa ampla como a máxima (0 a 100 %RH) ou em uma faixa mais estreita, como 20 a 80 %RH.

During configuration, the transmitter needs to be electrically powered. TxConfig-USB interface can provide the power to the transmitter, but this also depends on the used computer hardware.

The TxConfig-RS232 interface, however, requires an auxiliary supply for guarantee reliable communication with the computer. An external 9 V battery can be used for this purpose (**Figure 02**). An alternative is to configure the transmitter while it is in operation; this way, the needed energy is supplied by the current loop. See **Figure 05**.

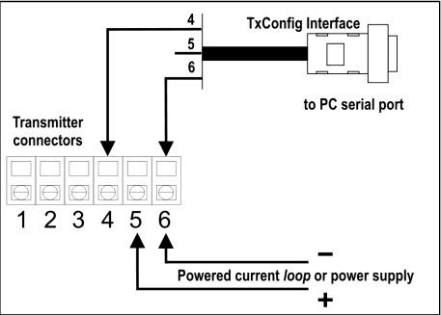


Figure 05 – TxConfig Interface connections – loop powered

The TxConfig interfaces contain dedicated circuitry for proper communication between transmitters and computer. Always make use of the TxConfig interfaces for configuration purposes, otherwise the transmitters may get damaged, voiding the warranty.

Serial port configuration errors may occur when other software are sharing the same serial port. Close all serial port applications prior to using the TxConfig software.